
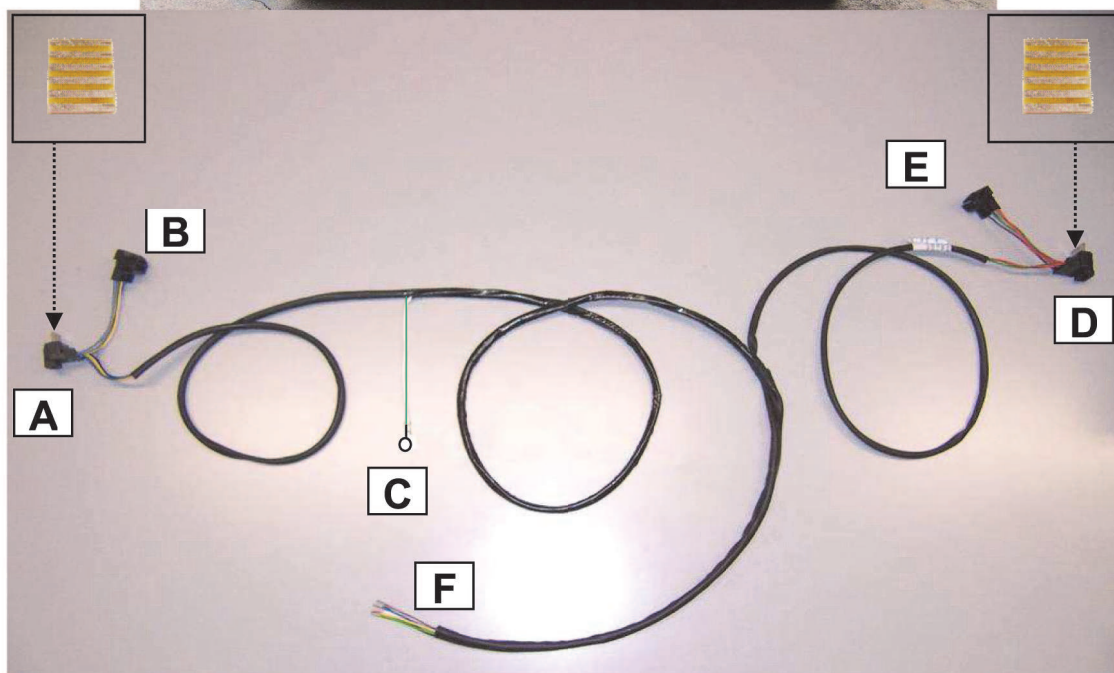
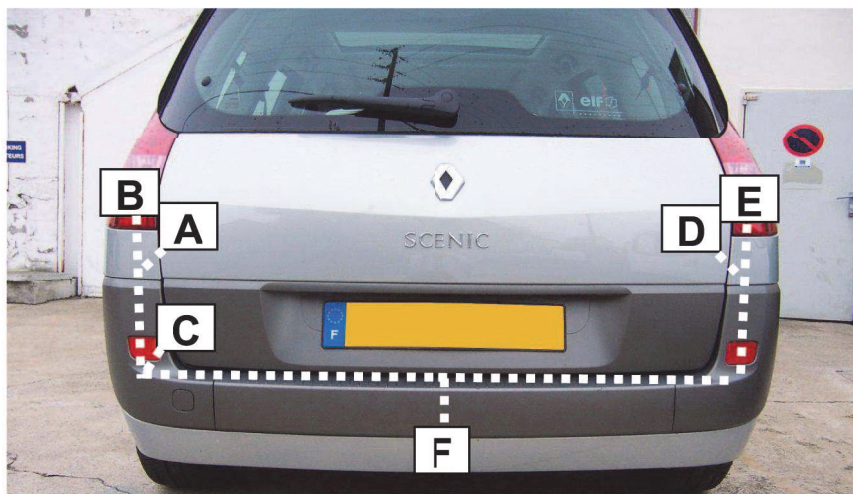
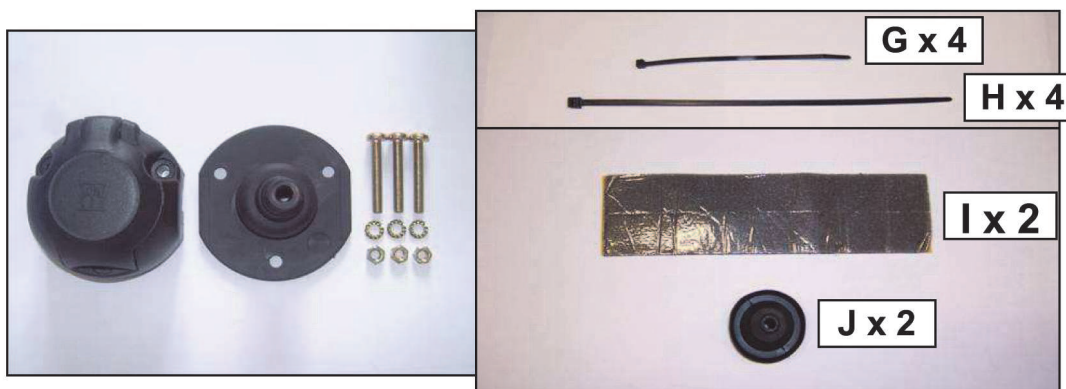


RENAULT SCENIC II**0 H 30**

Einbauanleitung elektrosatz Anhängervorrichtung mit 12N Steckdose
Fitting instructions electric wiringkit towbar with 12N socket
Montage-handleiding elektrokabelset voor trekhaakmet 12N contactos

**Liste des pièces / Teilliste / Part list / Onderdelenlijst :**


1

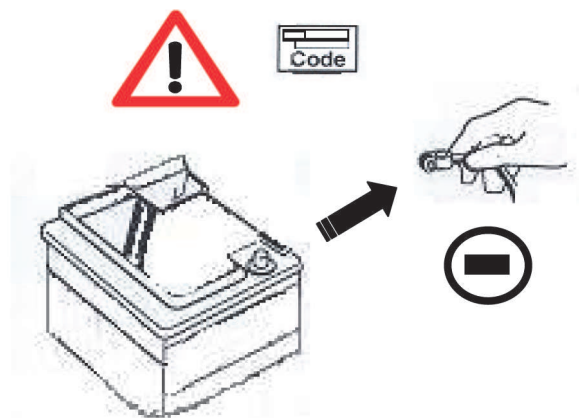

2



3

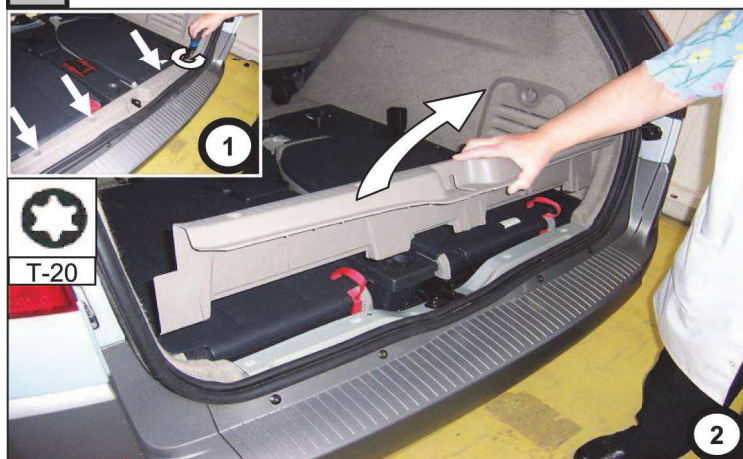


4



5




6







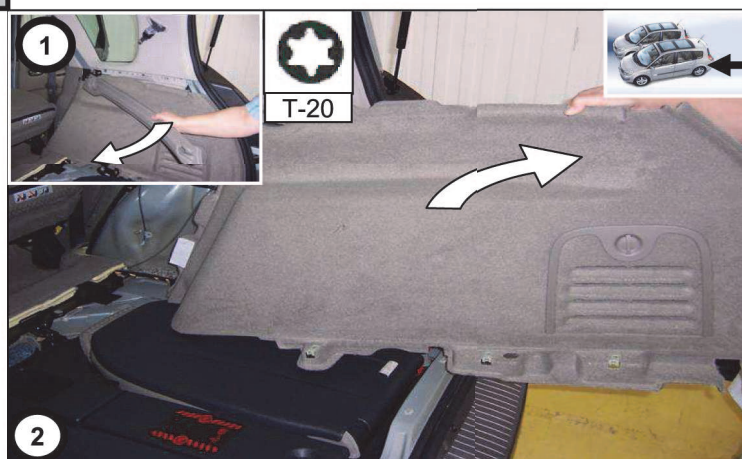


7




8

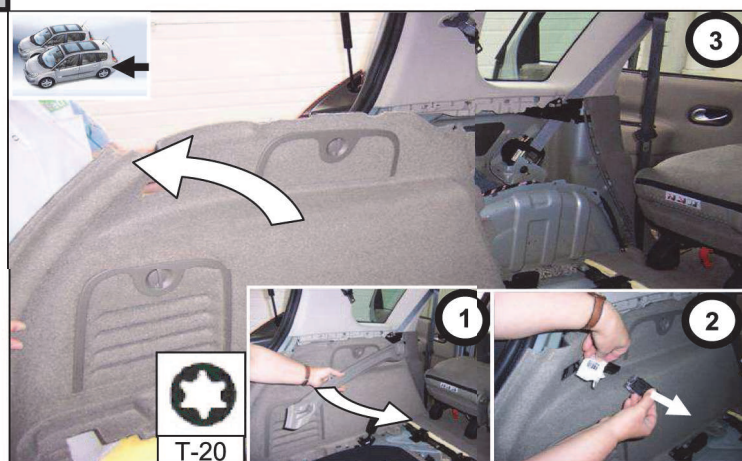

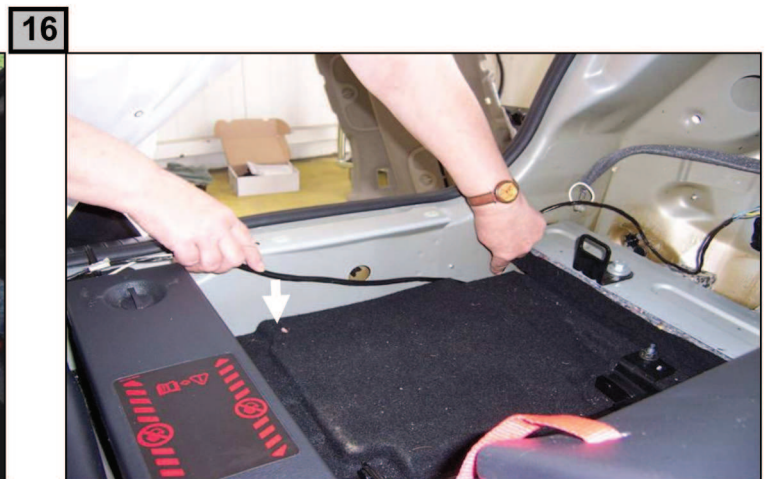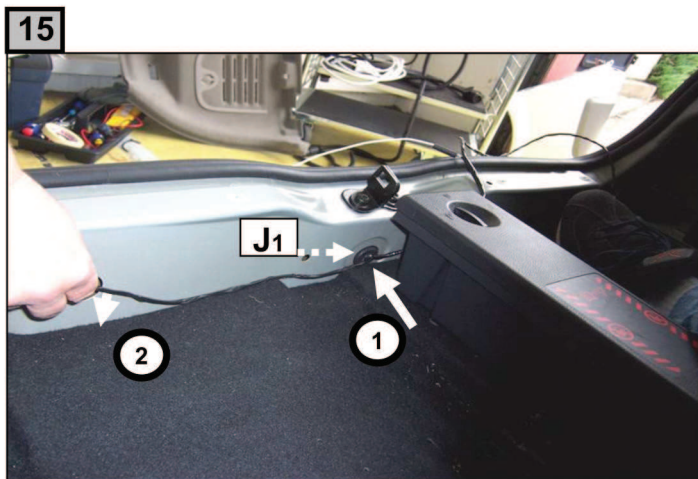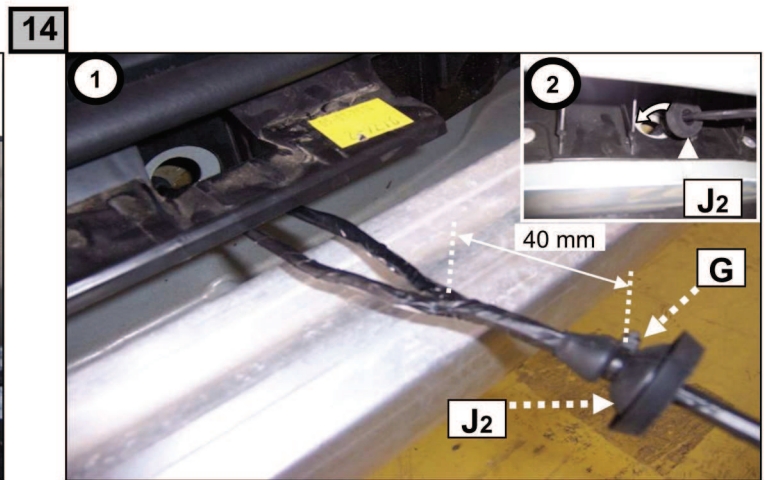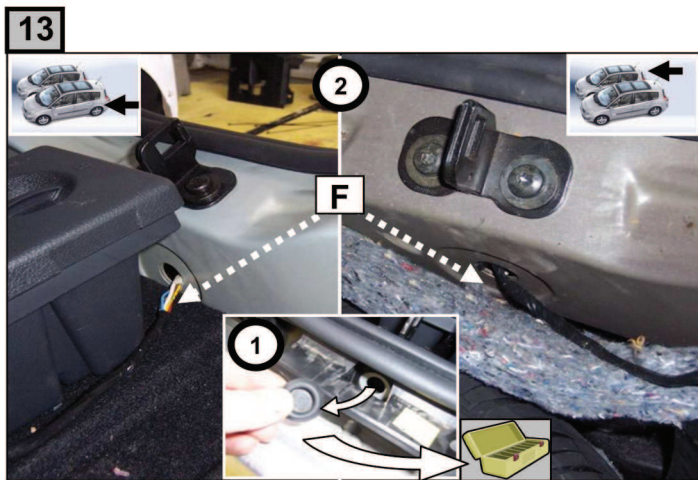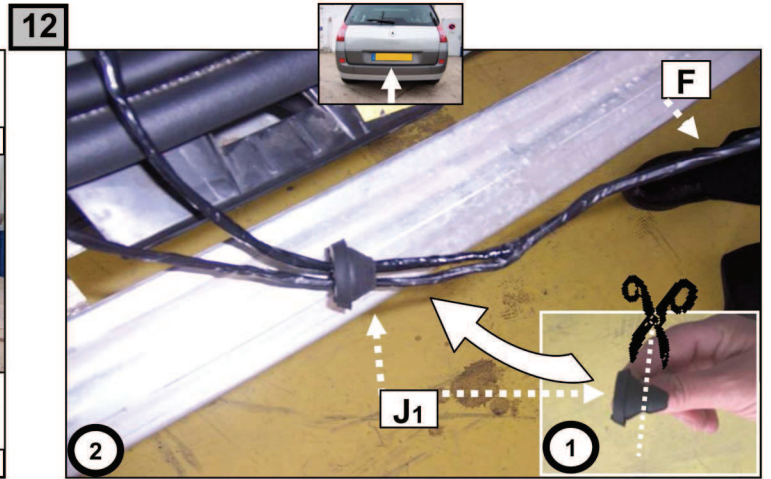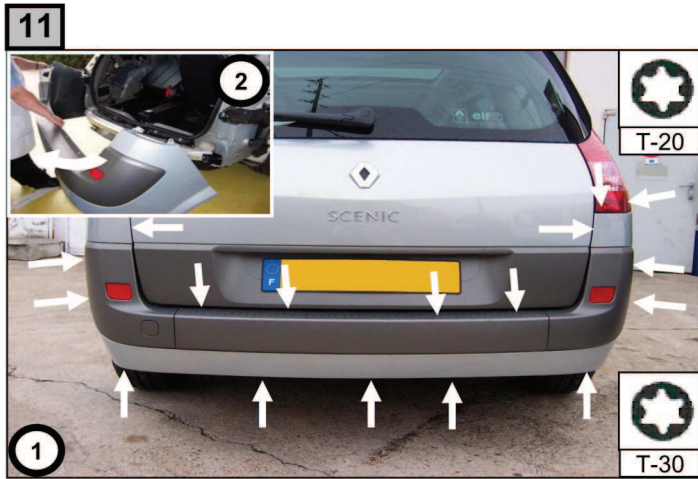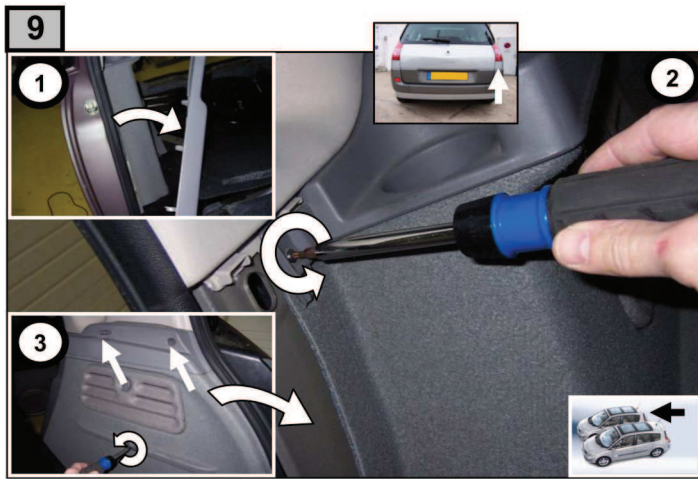


17


	1/L	2/54g	3/31	4/R	5/58R	6/54	7/58L	8/58B
								
	21+5 W	21W		21+5 W	40 W	63 W	40 W	
F	Jaune	Bleu	Vert/jaune	Vert	Marron	Rouge	Noir	Gris
D	Gelb	Blau	Grün/gelb	Grün	Braun	Rot	Schwarz	Grau
GB	Yellow	Blue	Green/yellow	Green	Brown	Red	Black	Grey
NL	Geel	Blauw	Groen/geel	Groen	Bruin	Rood	Zwart	Grijs
P	Amarelo	Azul	Verde/amarelo	Verde	Castanho	Vermelho	Preto	Cinzeno
I	Giallo	Blu	Verde/giallo	Verde	Marrone	Rosso	Nero	Grigio
E	Amarillo	Azul	Verde/amarillo	Verde	Marron	Rojo	Negro	Gris

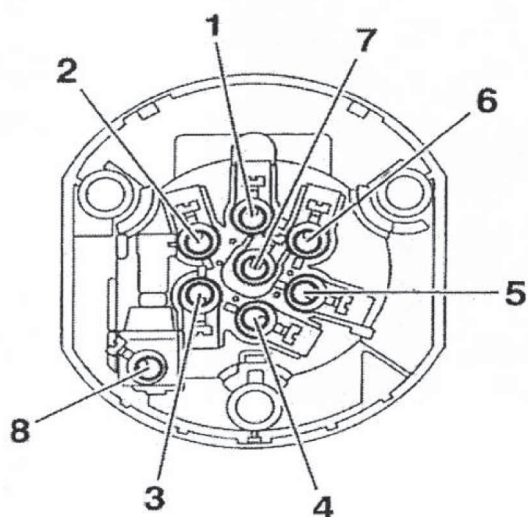


18

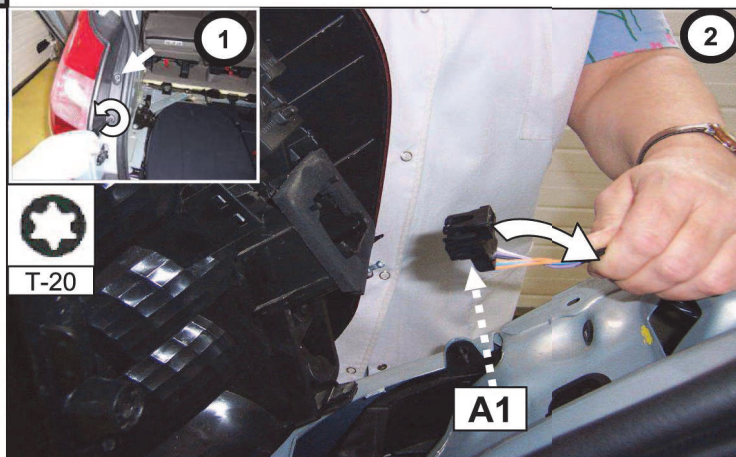


19

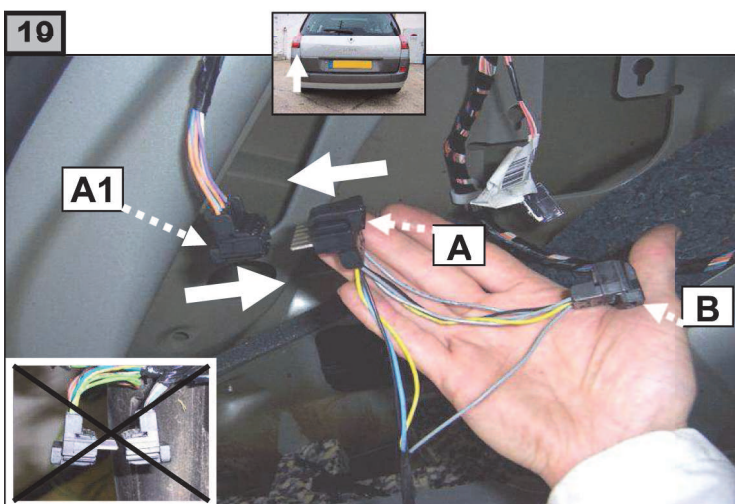


20





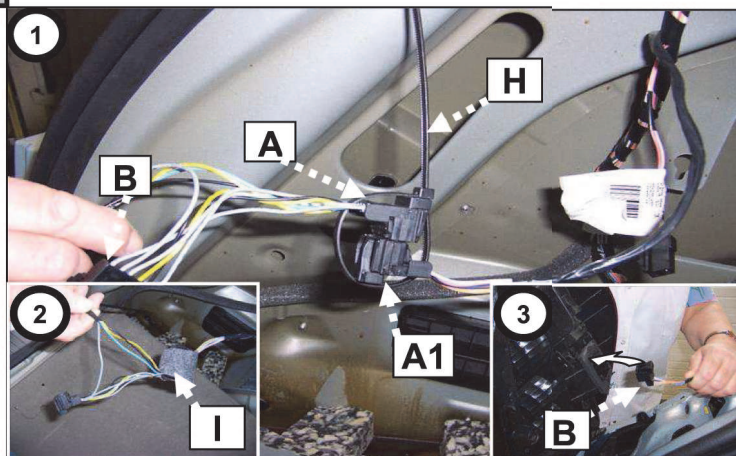


21

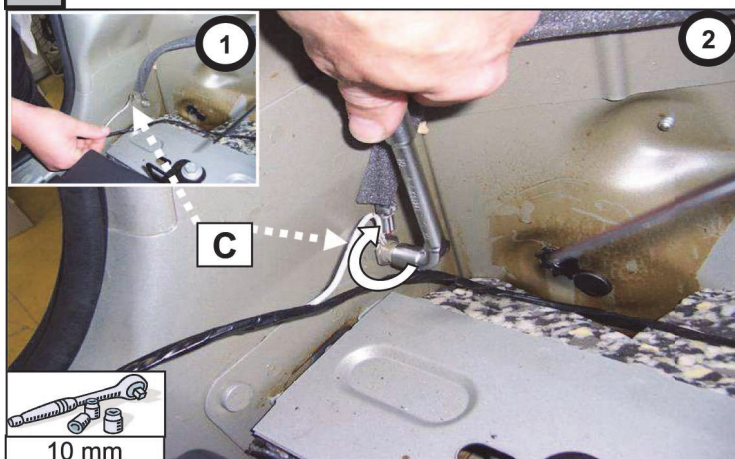

22

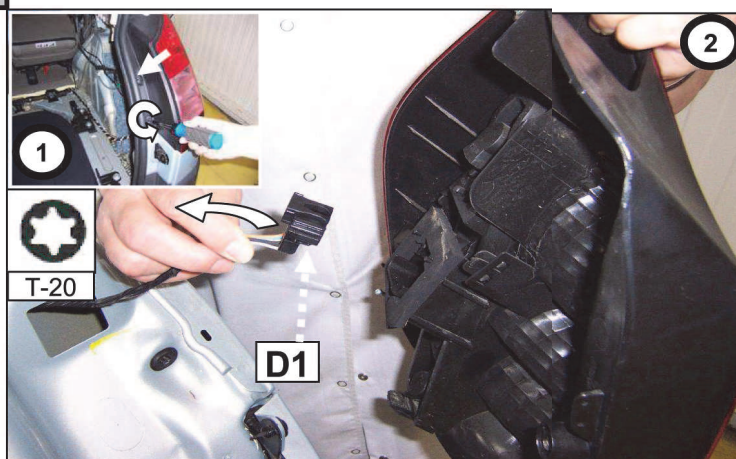

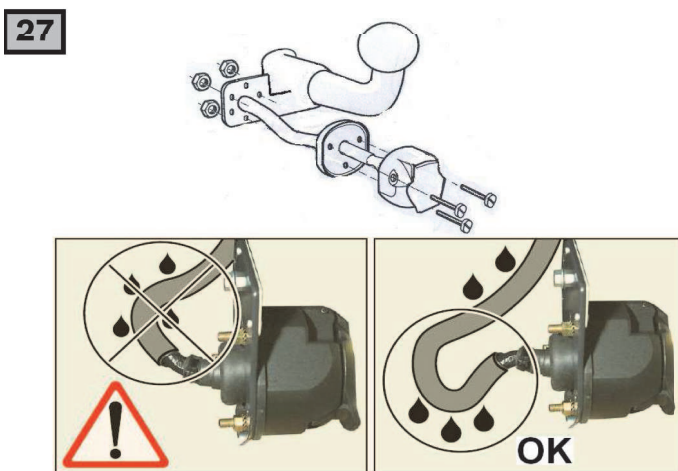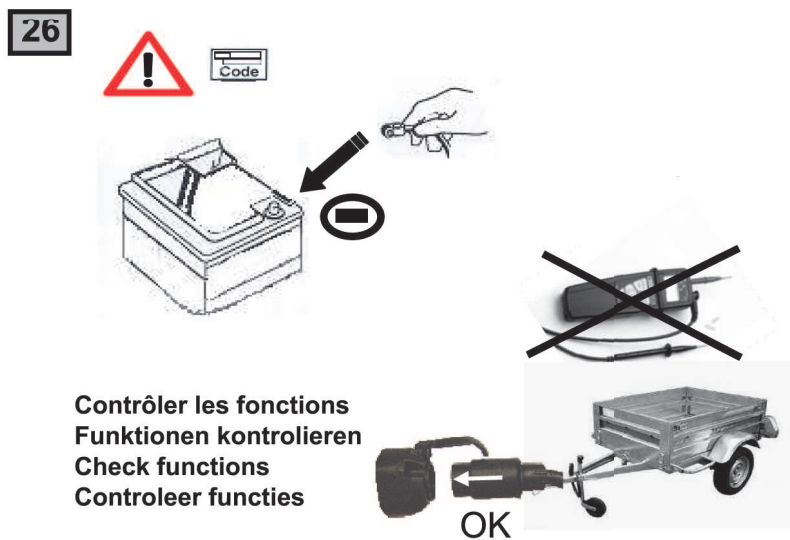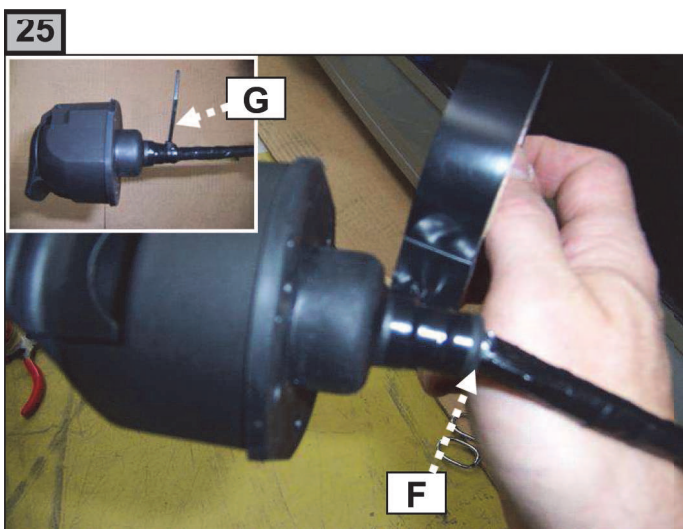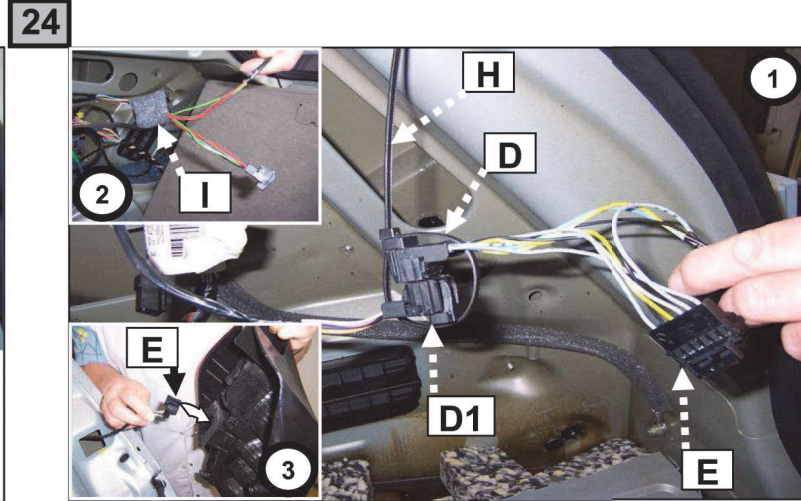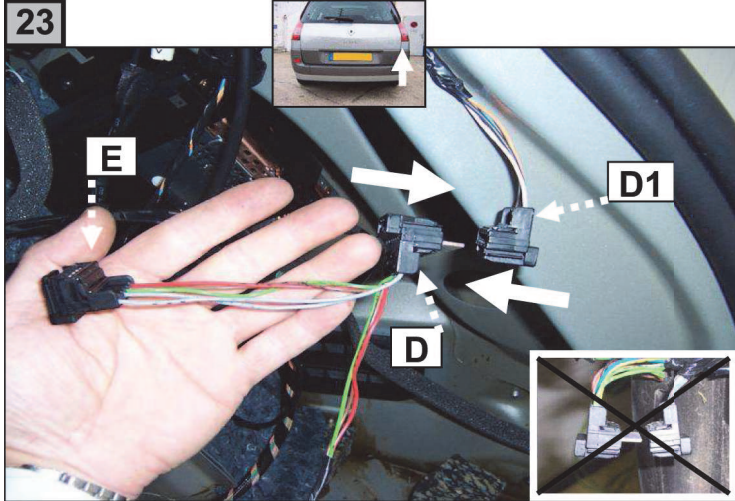

Lors du branchement de la remorque, désactiver le système "RADAR DE RECUL" au tableau de bord
When you connect the trailer, do remove the function "PARK ASSIST" on the dashboard