




Installation Instructions


Volkswagen Passat, B6/7,



- 2010 >

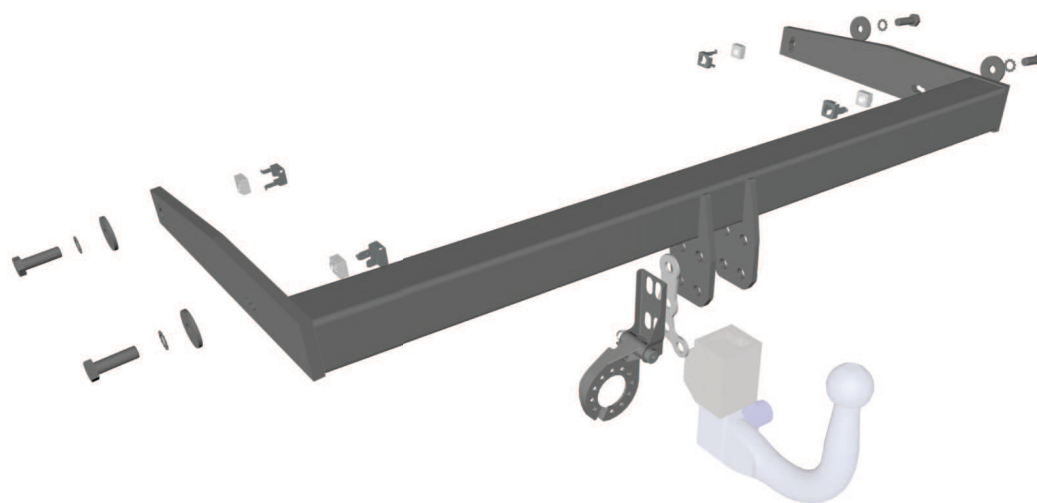


Option

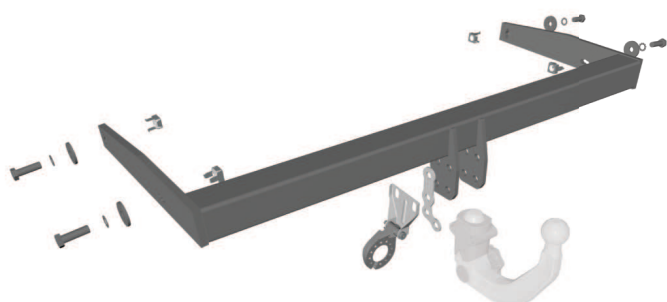

Technical Data:

Type:
 Test Number:
 Coupling Class:
 D-Value = 11.37 kN (max)
 Nose Weight = 85 kg (max)
 Weight = 22.30 kg



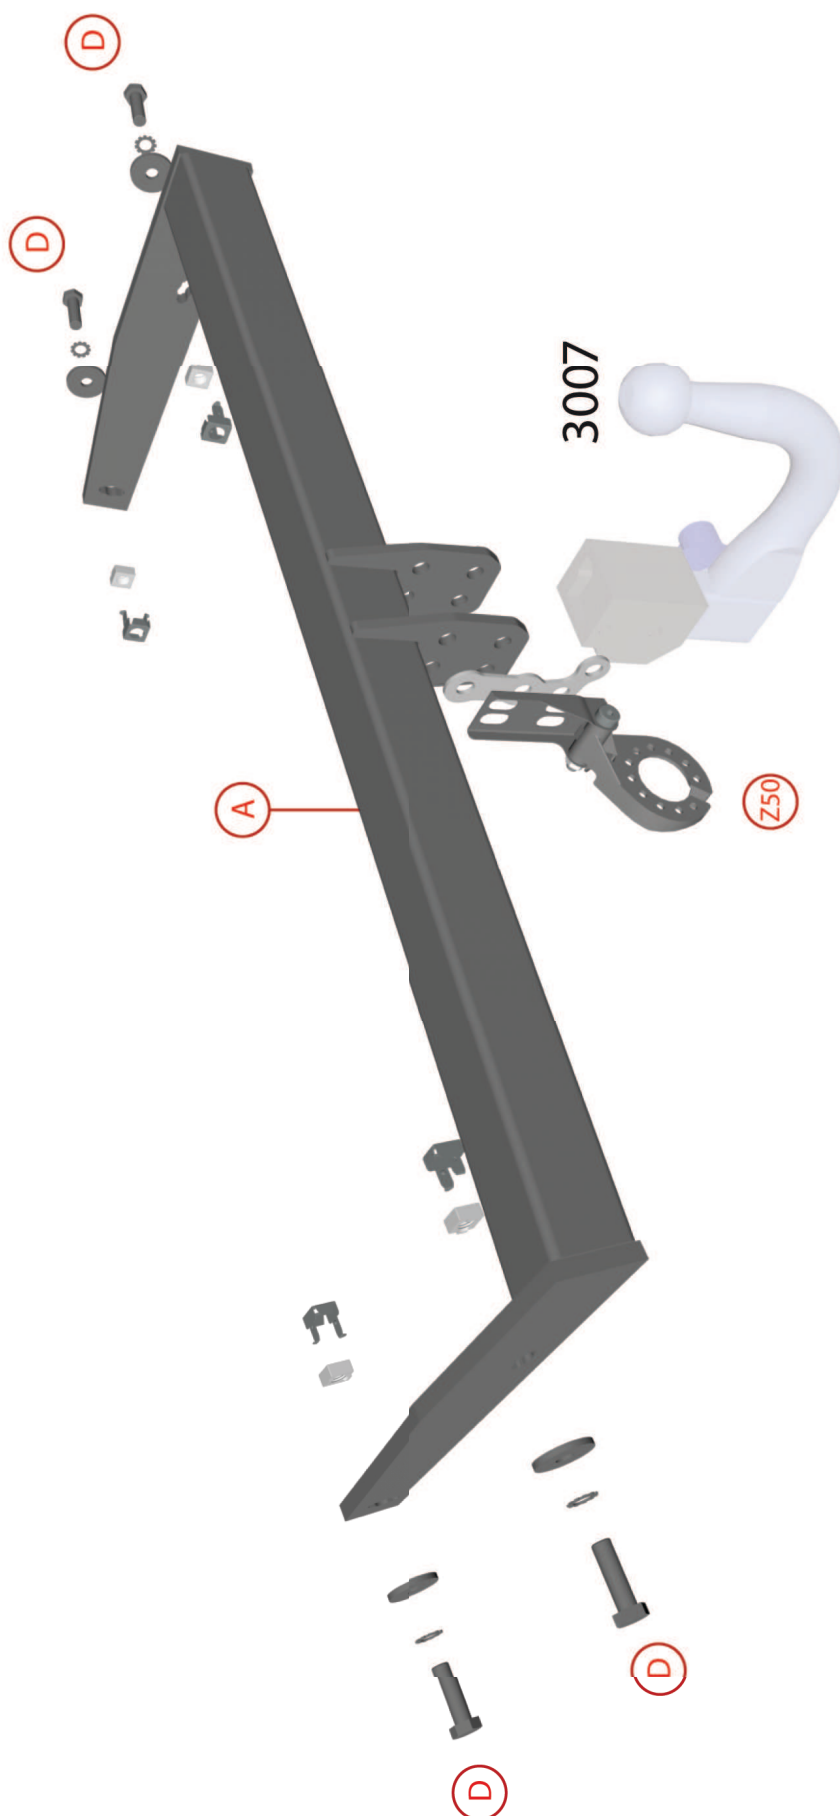




(A) 1

(Z50)



(D) 4 M12 x 45 x 1.75

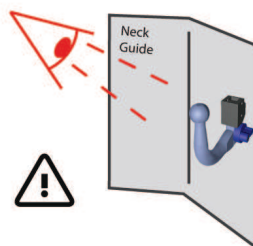

Tightening torques

M	Grade	Nm
M6	8.8	10Nm
M8	8.8	24Nm
M10	8.8	52Nm
M12	8.8	95Nm
M14	8.8	130Nm
M16	8.8	200Nm
M8	10.9	35Nm
M10	10.9	70Nm
M12	10.9	120Nm



Note: Be sure to observe separate installation instructions provided with each Neck variant
Electrical socket holder and mounting sets may vary.

Towbars are safety components and should only be installed by qualified personnel.





Option

(A) 1


(Z51) 1







(D) 4 M12 x 45 x 1.75

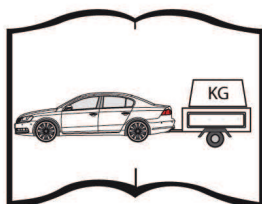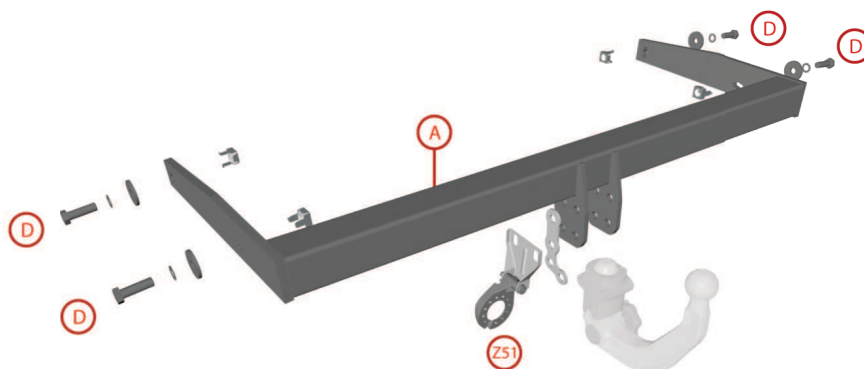




? KG

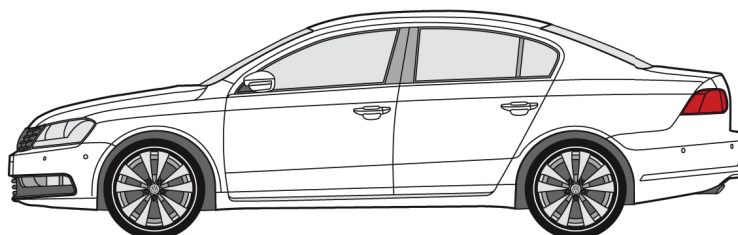

Torque range 0-220Nm

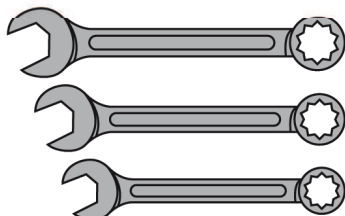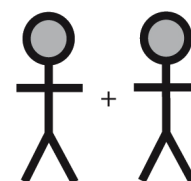


10 - 24 mm




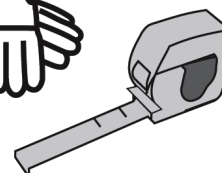







1.

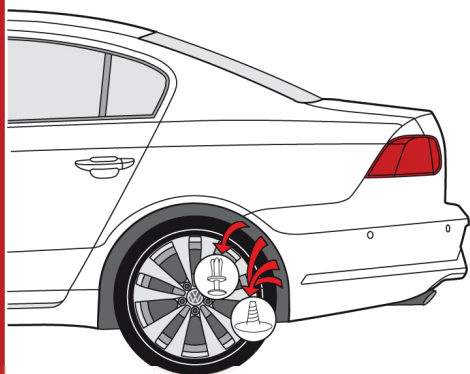




Note: may vary
Remarque: peut varier
Hinweis: kann variieren
Nota: puede variar
Nota: può variare

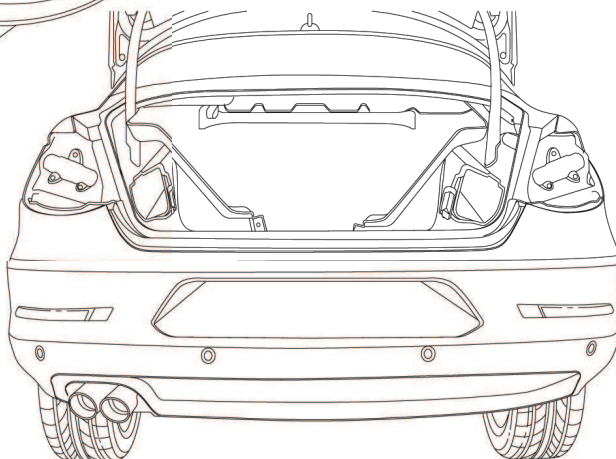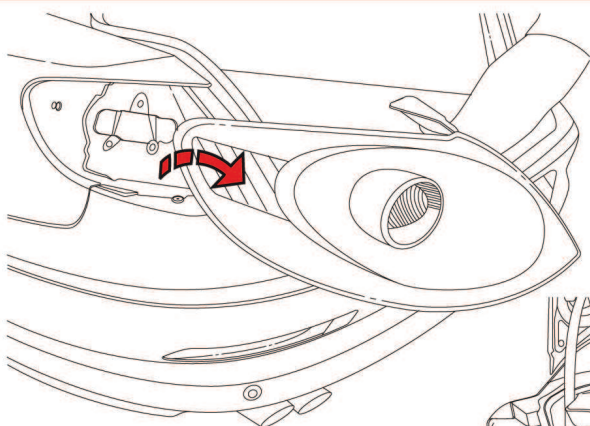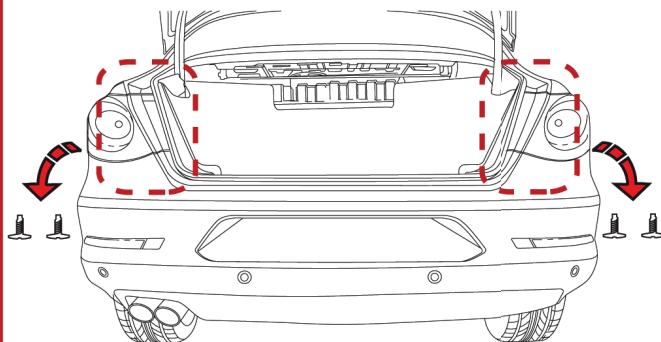
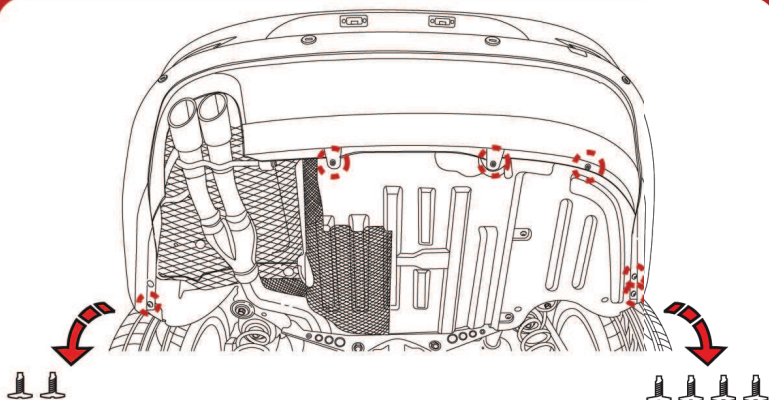
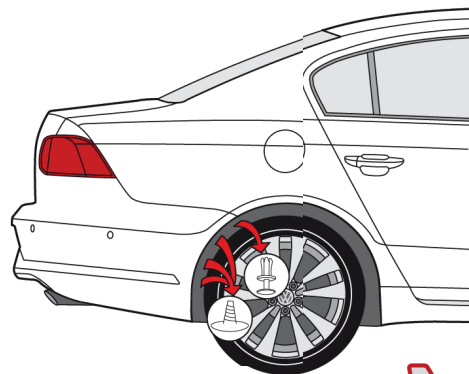



TAKE CARE
PREND SOIN DE TOI
PASS AUF
CUÍDATE
STAI ATTENTO

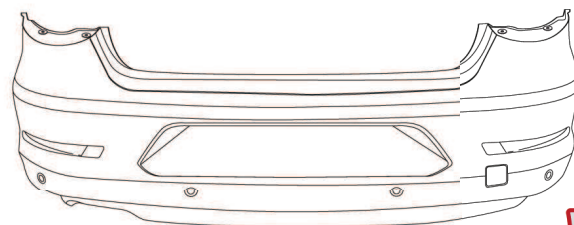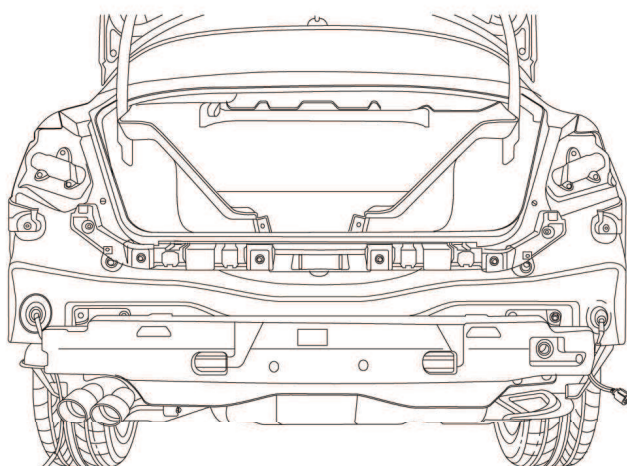



2.

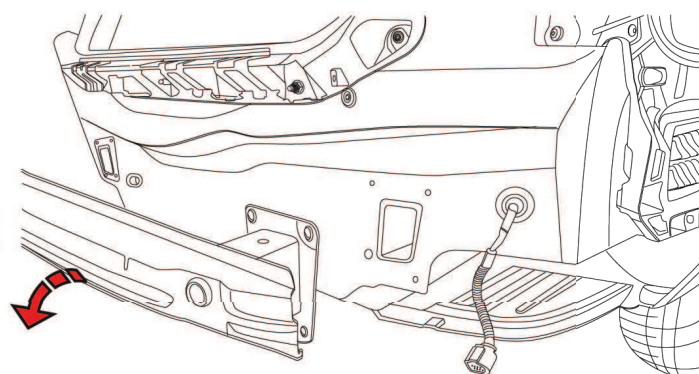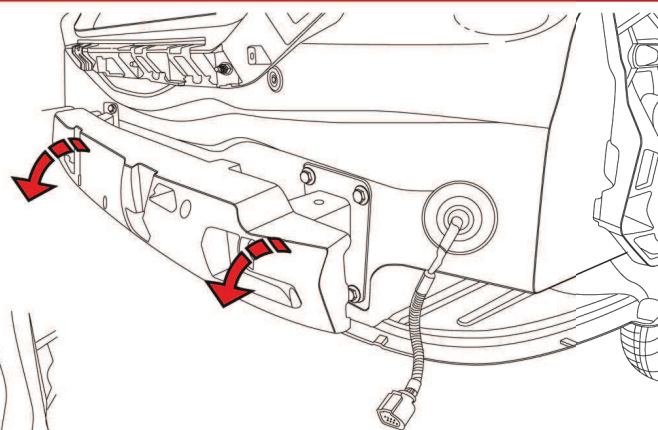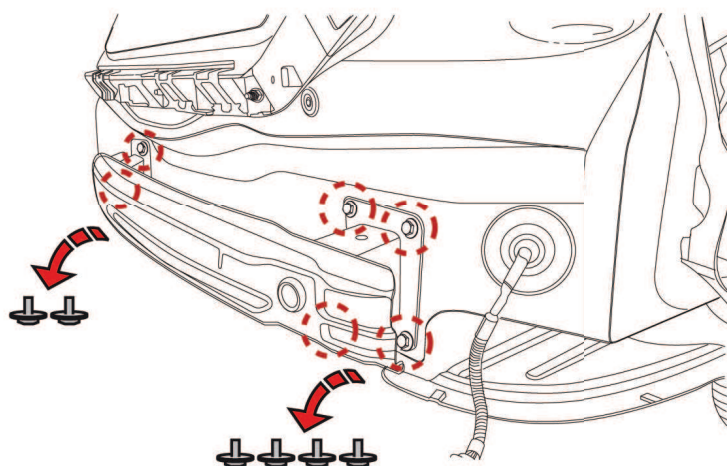

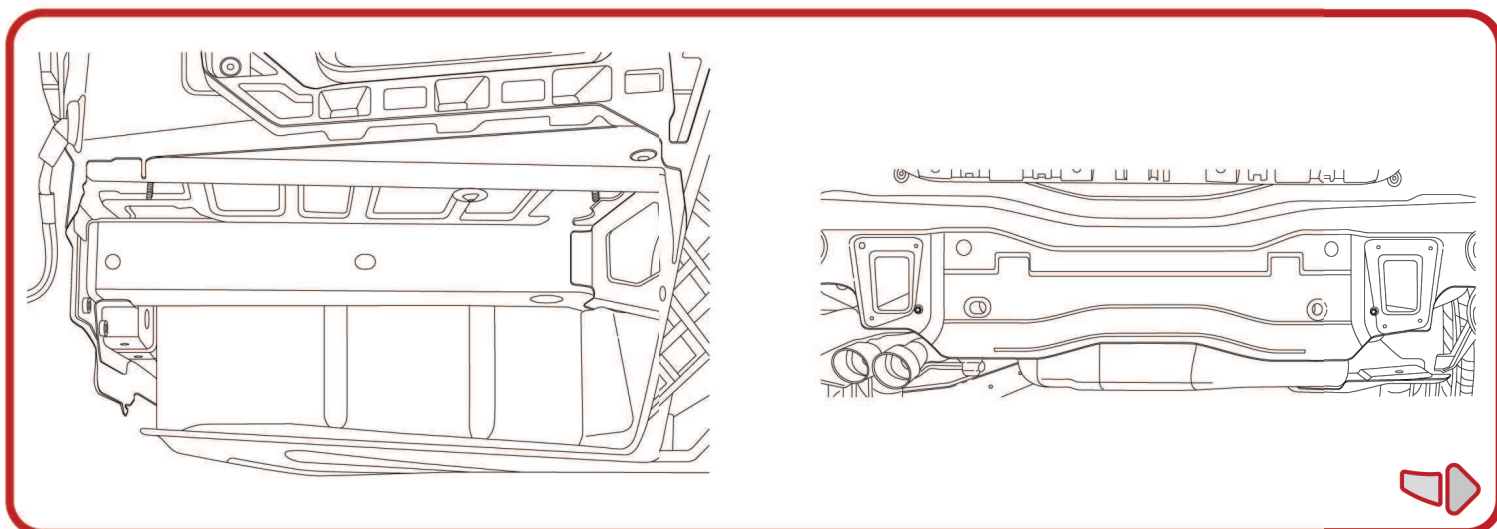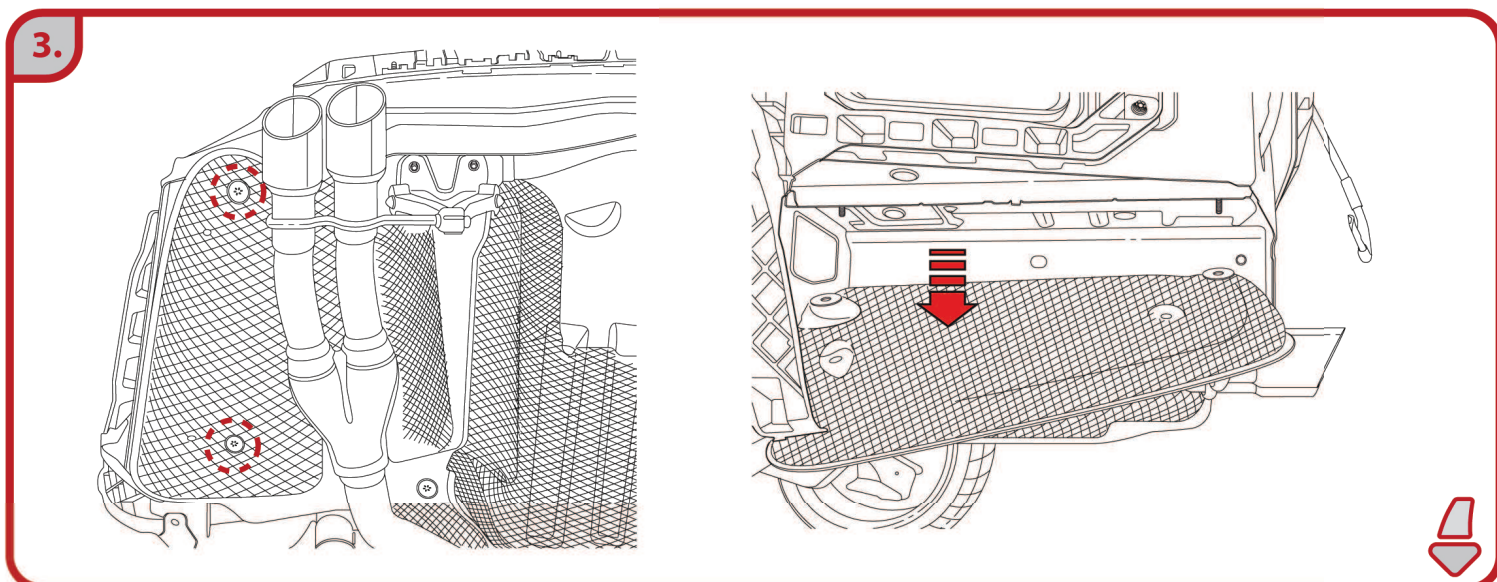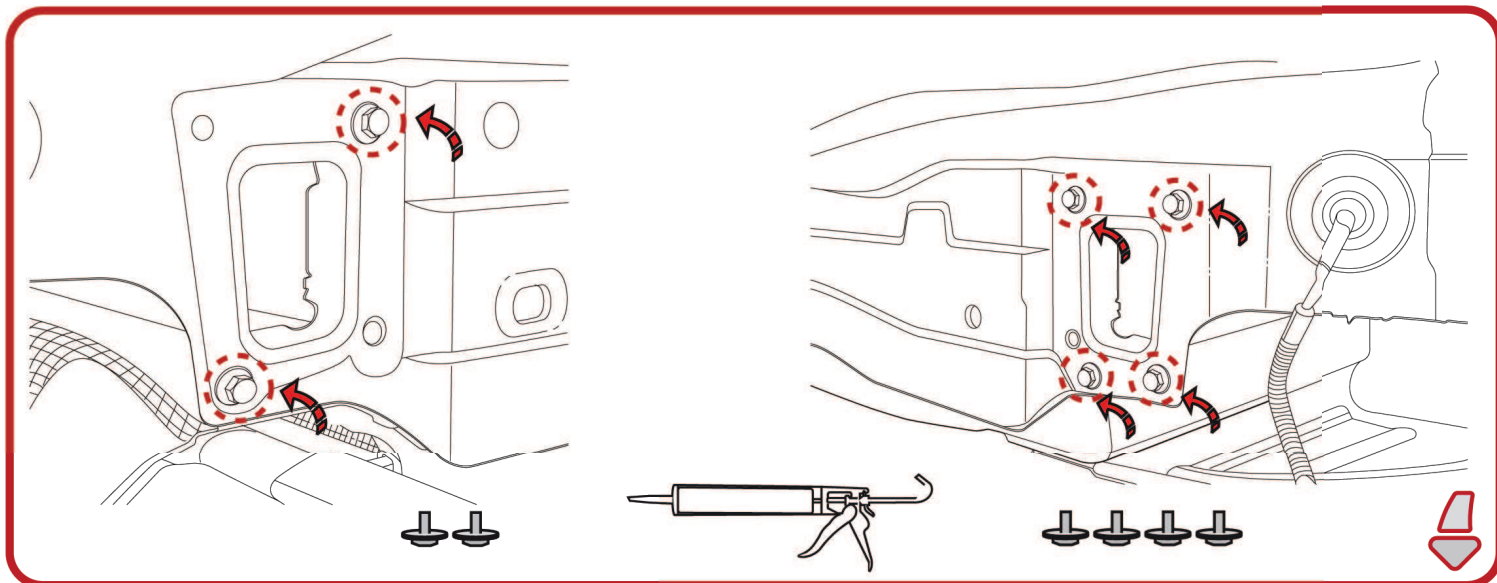



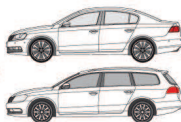


4.

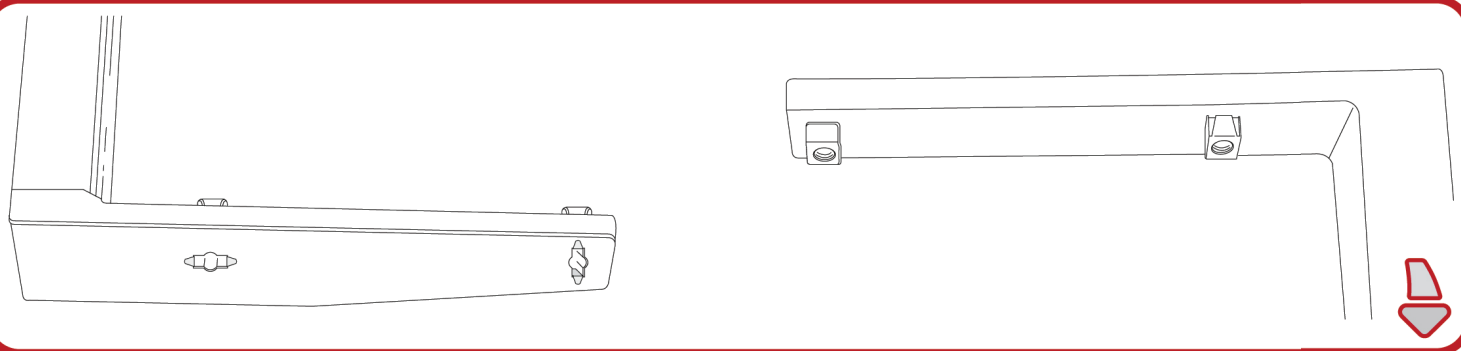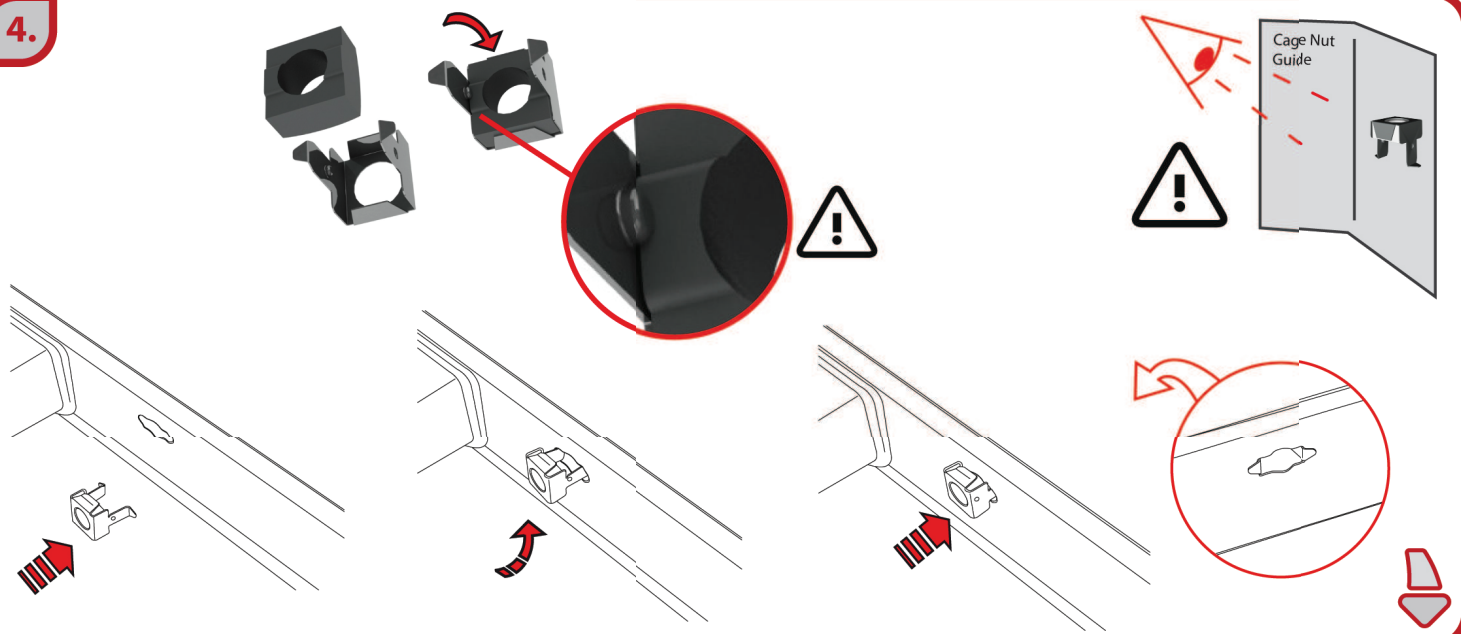


5.

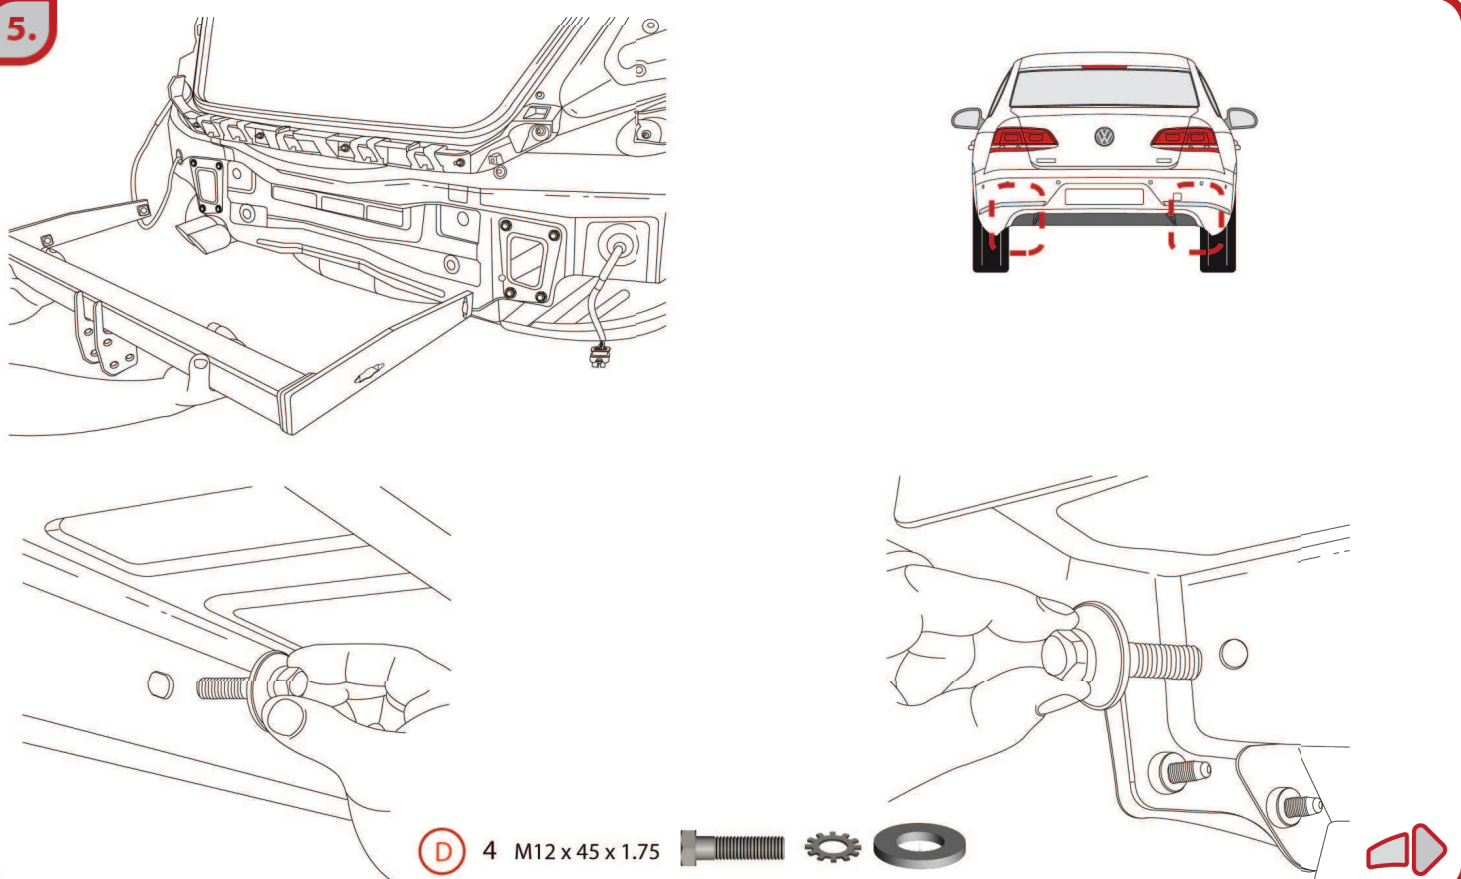


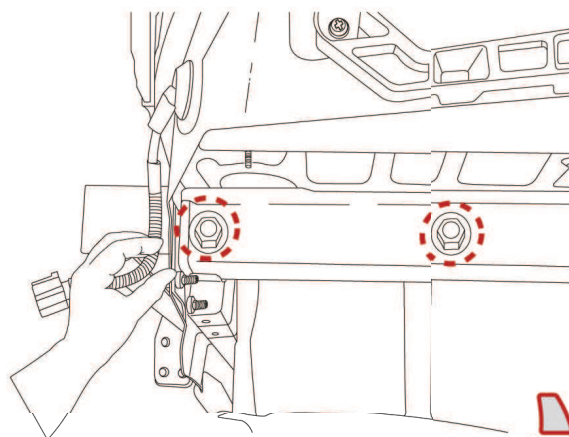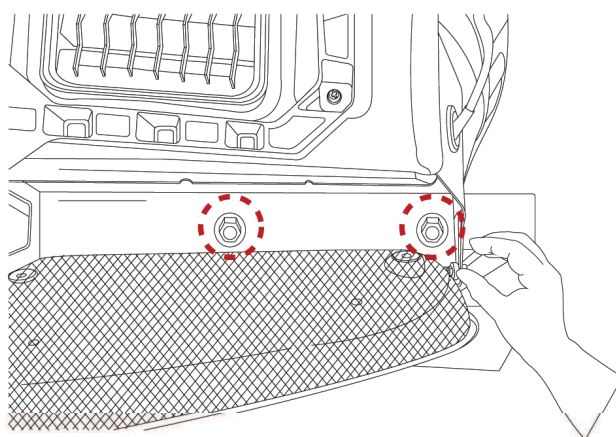


6.

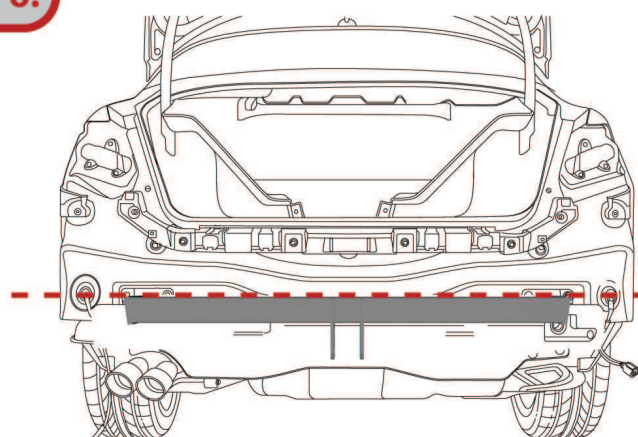

7.


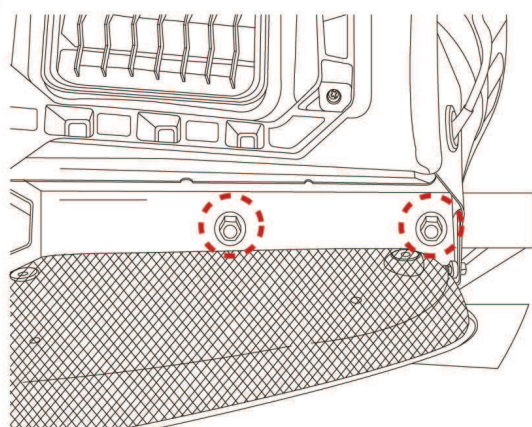


M12 - 95Nm

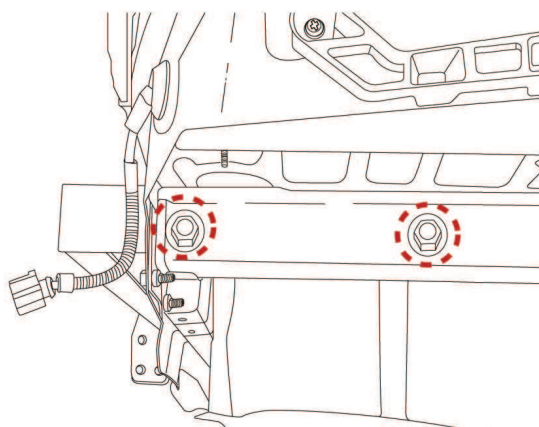





8.

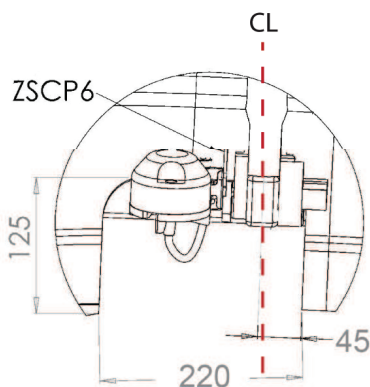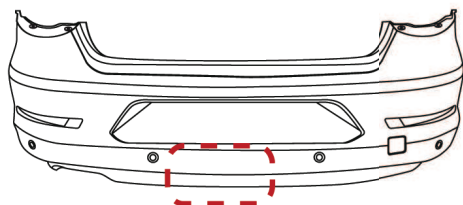


<2011 (B6)

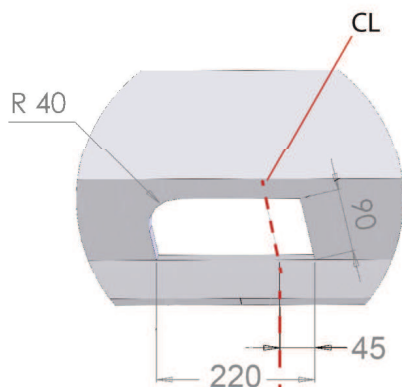

(B7)2011>


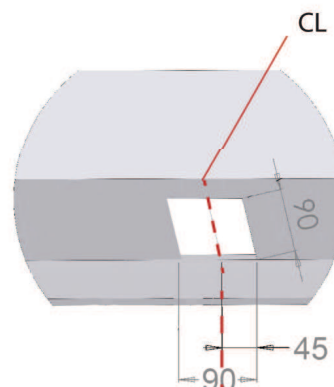


(CC)

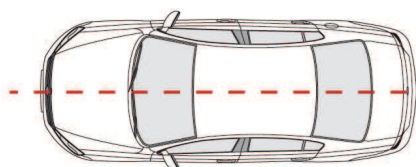



9.

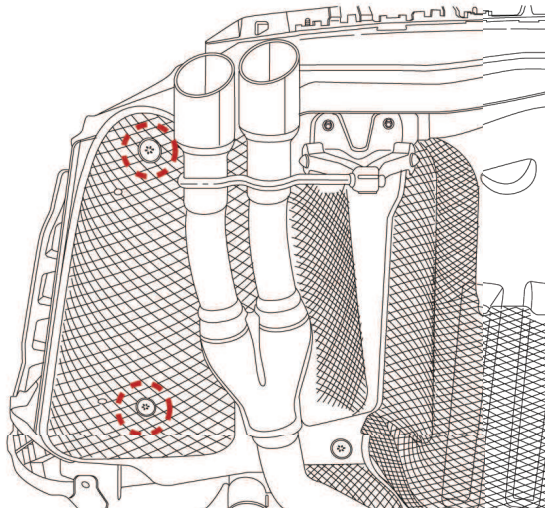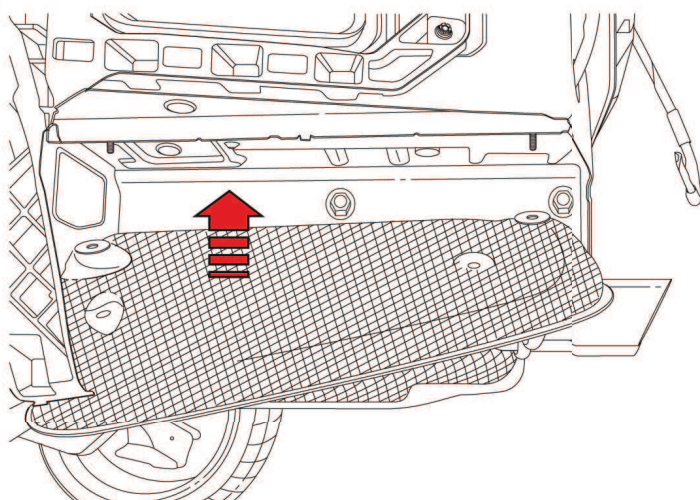

10.

